



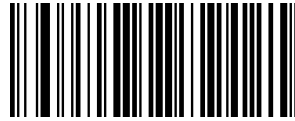

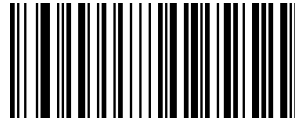


<p>CR</p> 	<p>USB-HID</p> 	<p>NO:S2DZDY80GV1</p> <p>2D Sanner service manual</p>
<p>LF</p> 	<p>USB-COM</p> 	<p>Default</p> 
<p>CR&LF</p> 	<p>RS232</p> 	<p>USB-MAC</p> 

<p>Same Barcode interval 300ms</p> 	<p>Low volume</p> 	<p>Case inversion</p> 
<p>Same Barcode interval 500ms</p> 	<p>High volume</p> 	<p>All Capital Case</p> 
<p>Same Barcode interval 700ms</p> 	<p>Case normal</p> 	<p>All Lower Case</p> 