


NO.S2DDN60XVO

2D Barcode Scanner User Manual

The following is general setup of this barcode scanner, please contact local distributor for more technical support.

Structure Chart:

Button: Trigger Button

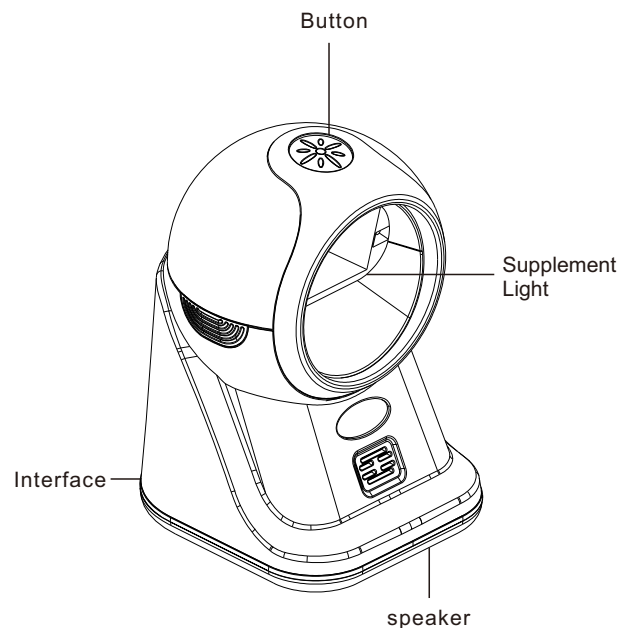

Product Features

- (1) New and more powerful decoding chip
- (2) Advanced decoding technology ,support E-payment like Wechat ,Alipay etc
- (3) Plug and Play ,easy to use
- (4) Fast and accurate barcode read , error rate as low as 1/5million
- (5) Long product life cycle

Technical Parameters

Barcode Scanner:	
Data Item	Parameter
Light Source	630nm LED Lighting Red Light
Decoding Capability	1D:Code128,UCC/EAN-128,AIM-128,EAN-8, EAN-13,ISBN/ISSN,UPC-E,UPC-A,Interleaved 2 of 5, ITF-6,ITF-4,Codabar,Matrix 2 of 5, Industrial 25, Standard 25,MSI-Plessey,Code 39,Code 93,Code 11,Plessey,GS1-DataBarTM(RSS)(RSS-14, RSS-Limited, RSS-Expand). 2D:PDF417, QR Code (QR1/2, Micro), Data Matrix (ECC200, 050, ECC000, 080, 100, 140)
Resolution	4mil
Optical System	640pixels(H)*480pixel(V)
Scan Mode	Auto-inductive Scanning
Scan Angle	Horizontal: 46.1° , Vertical: 30.4°
Interface	USB-HID,USB-COM,RS232
Standard Cable	2m
Material	ABS+PC
Working Current	150mA
Working Voltage	DC5V±1%
Shock Resistance	Withstand multiple 1.5m drops to concrete
Operating Temperature	0°C - 50°C
Storage Temperature	- 40°C - 70°C

Factory Default



Start Setting

Setup steps are as follows:

- 1.Scan the bar code of "Start Settings"
- ↓
2. Scanning required setting barcode
- ↓
3. Scan the bar code of "End setting"

For example: Add suffix enter setting, scan "Start Settings" bar-code, "CR"barcode and"End Setting" barcode of suffix enter setting in turn.

1.Start Setting



2.CR



3.End Setting



Interface



USB-HID(Default)



USB-COM

End Setting



Start Setting



RS232

Interface specification:

- 1.USB-HID Mode: Factory default is USB mode, no need driver;
2. RS232: Need to match special serial port cable, and receiving software to use at serial port (Serial port Default Setting: Baud Rate: 9600、Data Bit: 8 bits、 Stop Bit: 1 bit、 Check Bit: None);
3. USB-COM: special driver should be installed.

Keyboard language



USA(Default)



Italian



Belgium



Canada

End Setting





Start Setting



French



UK



Japan



Germany



Russia

Buzzer



On



Off

Baud Rate



4800



9600

End Setting



Start Setting



57600



115200

Note: Baud Rate must be same between barcode scanner and serial port APP. Eg: Barcode Scanner default Baud Rate is 9600, the APP must choose same Baud Rate 9600

Symbology configuration



Enable all 1D barcodes



Disable all 1D barcodes



Enable all 2D barcodes



Disable all 2D barcodes



Enable EAN13 to ISBN



Disable EAN13 to ISBN (default)

End Setting



Start Setting



Enable EAN13 to ISSN



Disable EAN13 to ISSN (default)



Enable EAN13 2-digit extra



Disable EAN13 2-digit extra



Enable EAN13 5-digit extra



Disable EAN13 5-digit extra



Enable PDF 417



Disable PDF 417 (default)



Enable Data Matrix



Disable Data Matrix (default)

End Setting



Start Setting

Case Settings



All Lowercase



All Uppercase



Keyboard Case Normal Output

Transmission Speed



No Delay



Delay 20 ms



Delay 40 ms

End Setting



Start Setting

Suffix Settings



CR



CR & LF

Trouble shooting:

If the barcode scanner is not working properly, please try to check as follows instructions:
(1) Check the cable to make sure it is the original cable and connect to host properly
(2) Check the barcodes required to read, it is possible not to read wrinkled, defaced, poor printed etc barcodes
(3) Check the barcode type, make sure the barcode scanner support it and already enabled
For more info, please contact distributor for technical support

Cautions:

(1) Reading window must be kept clean, the supplier is exempt from warranty liability for damage caused by improper maintenance and use
(2) Avoid the reading window to be abraded or scratched by hard and rough objects
(3) Avoid liquid spilling to the reading window
(4) Do not stare into beam when the led light on

End Setting

